




2 Channel Dimmer – MESBUS Technical Documentation

MES-DIM-2P

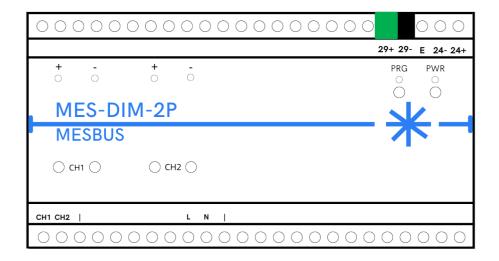

Features:

- 2 Individual outputs / Channels
- Manual output operation with push button and LED status indicator
- 10 Scene functionality
- Din rail mount assembly
- Total data saving on bus failure
- Possibility of Configuring Trailing-Edge and Leading-Edge per channel
- Programming button
- CE Mark*

General Product Specifications						
Type of Device			Electric control operation device			
	Voltage (typical)		29VDC SELV			
MESBUS	Voltage Range		21-31 VDC			
Supply	Maximum Consumption	Voltage	mA	mW		
		29VDC (typical)	10	290		
	Bus Connection		Typical Bus Connector TP1, 0.8 mm ² section			
Mains Supply		230 VAC (50 Hz), +10%, -20%				
External supply			Yes, 24VDC – 150mA			
Operating temperature			0 − 70 °C			
Storage Temperature			-25 to + 75°C			
Ambient Humidity			5 to 95% RH (No Condensation)			
Storage Humidity			5 to 95% RH (No Condensation)			
Manual Test facility			4 Push button switches – ON/OFF and Dimming			
Usage			Indoor, to be mounted inside distribution boxes or electrical			
			panels with DIN rail			
IP Class			IP 20			
Power Failure Response			Data saving			
Response when starting			Data recovering and other settings			
Operation Indication			Programming LED indicates programming mode (Red). Output status LED indicators reflect current output state (Green). Power Status LED indicates Power status of Module (Green)			






Output Specifications			
No. of Channels	2– Dimming		
Dimming Control	On/Off and Dimming $0-100\%$		
Short Circuit Protection	Yes		
Outputs per common	1 individual output		
Maximum Allowed Power	250W Per Channel		
Connection Type	Screw Terminal Block		
Recommended cable selection	0.5mm ² to 4mm ² (26-10AWG)		
Cable Type	Stranded or Solid wire.		
Load Type	Incandescent and LED		

Error Indication using LEDs:

- 1. AC Power Supply Failure: One LED of each channel will blink for 1 second.
- 2. Overheating: Both the LEDs of each channel will blink for 1 second.
- 3. Short Circuit Error: Both the LEDs of the channel with error will blink alternately for 0.25 seconds each.

Wiring Diagram

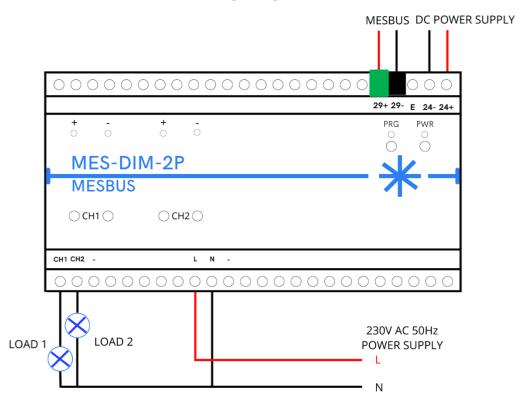

ASAFETY INSTRUCTIONS

- Installation should only be performed by qualified professionals according to the laws and regulations.
- Do not connect the mains voltage nor any other external voltage to any point of the Mesbus connector; it would represent
 a risk for the entire system. The facility must have enough insulation between the mains (or auxiliary) voltage and the
 Mesbus or the wires of other accessories, in case of being installed.
- Once the device is installed (in the panel or box), it must not be accessible from outside.
- Keep the device away from water and do not cover it with clothes, paper or any other material while in use.

